



EN

INSTRUCTIONS

INSPECTION Always inspect the light for damage, and make sure that it operates properly before use.

A - BATTERY CHARGING- Plug USB cable into charger and a 5V (2.1A) USB power source. Put 21700 lithium ion battery into charger. Make sure battery + connects to the + contact in the charger. For charging status observe the charge indicator on charger. (Note: Some models provided with 2 individual chargers or a single dual charger for 2 batteries)

B - BATTERY INSERTION / REMOVAL Unscrew the locking ring on the rear of the light. Pull the switch assembly straight out of the light. Insert / remove 2 batteries. Make sure the battery polarity is correct. Make sure the o-rings on the switch assembly are clean. Press it into the rear of the light. Replace the locking ring. Do not damage the ring by making it too tight.

C - O-RING The two o-rings in the front and two o-rings in back of the light along with their sealing surfaces must be kept clean and lubricated with silicone grease.

CAUTION

FRONT LENS CHANGE OR CLEANING

- Do not try to remove lens from aluminum housing. It is permanently attached.
- Do not try to replace battery by removing front lens cap. Remove rear cap to change battery.
- For video or wide angle use insert the special wide angle conversion disk into the front lens cap.
- Do not over tighten the front lens in order to make a better water proof seal.

D - ON/OFF Turn the light ON or OFF by pressing the yellow button on the back of the light. (Hold the button down at least 1 second) Pressing the button will make the light brighter each time it is pushed until it turns off. There are 3 levels of brightness plus blink (SOS).

E - TRAVEL During long travel such as flying, the batteries should be removed from the light and carried separately in the passenger compartment using the protective plastic containers provided. For shorter ground based trips, the light switch should be disabled by partially unscrewing the rear locking ring. Test to see that the switch will not function in this mode.

WARNING

RECHARGEABLE LITHIUM-ION BATTERY

Improper handling can cause heat, smoke or fire.

- Use only recommended UK charger.
- Do not charge unattended.
- Charge battery in a protected area or indoors.
- Do not charge when damaged or wet.
- Do not remove label or disassemble.
- Do not expose to heat or throw into fire.
- Do not short or connect (+) to (-).
- Always store or transport battery in a non-conductive container. Keep battery away from loose coins or wires.
- If battery overheats or bulges, move it away from combustible materials.
- For a longer battery life, store partially discharged.

F - ACCESSORY ATTACHMENT Two 1/4-20 threaded sockets (1.2 inches apart) can be used for attaching UK Photo Arm adapters or other devices. (When using attachment screws, make sure that they are not too long. (They could push through the wall of the light.) The mount will also slide into the accessory UK Hand Mount.

G - EYE PROTECTION Do not look at the LED or shine beam into the eyes of other people.

H - DISPOSAL Batteries and waste electrical products should not be disposed of together with municipal waste. Please recycle according to local regulations such as returning to recycling facilities, manufacturer or distributor.

Limited Lifetime Warranty

Underwater Kinetics products are engineered for maximum performance and durability. All products carry a Limited Lifetime Warranty to the original retail purchaser to be free from defective material and workmanship under normal and intended use. In addition, the Underwater Kinetics Limited Warranty covers materials used in its products to the original purchaser, from the date of purchase, as follows: plastics for 10 years; rubber for 3 years, LED and electronics for 2 year, rechargeable batteries for 90 days.

In the event the original retail purchaser detects a defect in the material or workmanship, the product along with proof of purchase date should be returned to an authorized Underwater Kinetics dealer or directly to Underwater Kinetics with the postage prepaid. Underwater Kinetics agrees to repair or replace at Underwater Kinetics' sole discretion any product found to be defective in material or workmanship within the time period specified above.

For the complete Limited Lifetime Warranty write to Underwater Kinetics or go to the web site www.uwk.com.

Address all correspondence and returns to:
Underwater Kinetics
13400 Danielson Street, Poway, CA 92064
tel: (858) 513-9100 fax: (858) 513-9111
email: customersupport@uwk.com